


RED CAMERA CONTROL BUTTON

- **Press halfway to autofocus**
- **Press once to start/stop recording**
- **Press and hold to take a photo**
Only when the camera is not in film mode.

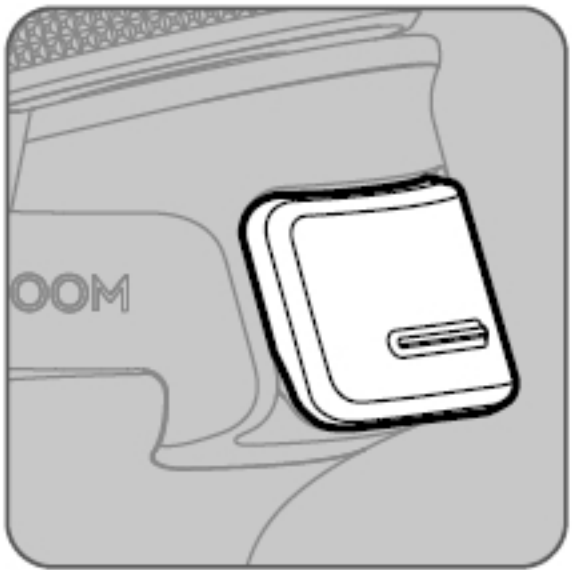

TRIGGER

- **Press and hold to enter lock mode**
The camera won't move with the movement of the gimbal.
- **Tap twice to re-center the gimbal**



M BUTTON

- **Tap to switch between M1, M2 and M3 profiles**
- **Press and hold for sport mode**
- **Press three times to enter/exit 3d roll.**
In flashlight mode you can activate 360 degree auto rotation by tapping the joystick left or right twice. To stop the auto rotation tap the trigger twice.

Cable ①: USB-C to USB-C

Connecting with this cable, you will be able to use the front dial to adjust the focus when in manual focus mode while filming. You may also change ISO vs. shutter speed or aperture.

△ To play back a clip on your camera, you need to put the gimbal in sleep mode first by pushing the on/off switch once.

△ The camera battery gets charged through the gimbal when using this cable! Keep in mind that your gimbal gets discharged while using this cable.

Cable ②: USB-C to Sony-Multi (preferred)

Connecting with this cable, the front dial lets you zoom (digital or optical, depending on your lens; choose focus in the front dial menu to enable zoom) and you can capture photos (when not in film mode on the Sony). Timelapse and panorama both require this cable as well. You can only use the front dial when in film mode on the Sony. Playing back a clip on the camera can be done without putting the gimbal to sleep mode.

For traveling discharge gimbal to lower than 30% battery power.

